

HTS08 Systems

For CAB and vacuum brazing



... where experience counts!

PhoenixTM HTS08 Systems For CAB and vacuum brazing

Data logger

PhoenixTM data loggers are designed for use in harsh industrial environments. The electronics are protected by a robust, water resistant, machined aluminum case. Cold junction compensation with feedback error detection and noise reduction ensures accurate and reliable data. Optional two way RF telemetry is available, allowing real time data analysis and for the data logger to be reset and downloaded remotely. All loggers are shipped with a factory calibration certificate traceable to national standards. Optional certification to UKAS (UK) or DKD (Germany) can be supplied if required. For convenience and future reference, a copy of the original calibration certificate and the calibration data are stored within the data logger and can be accessed as required.

Type No. of channels Thermocouple type Measurement range

Accuracy Resolution Max operating temperature Battery type Sampling rate Memory

Start trigger

PC connection Dimensions

PTM1-206, PTM1-210, PTM1-020 6.10 or 20 K or N Type K: -100°C - +1370°C Type N: -100°C - +1300°C +/- 0.3°C 0.1°C 80°C 2 x Alkaline (AA) Adjustable from 0.2 second to 1 hour Up to 3.8 M data points, non-volatile memory Time, temperature, start button or software Hard wire or Bluetooth 20 x 98 x 200mm (h x w x l)

🚯 Bluetooth

Two way radio transmission as an option

PTM1220

PhoenixT



Robust and waterproof housing for reliable use in hostile environments

Standard batteries: 1000h



What is temperature profiling?

All industrial ovens or furnaces use thermocouples to control the zone temperatures. However these thermocouples measure only atmosphere temperature in their respective zones and do not indicate the true temperature of the product, which is vital to ensure the heat treatment specification is adhered to.

Bluetooth PC connection

PhoenixTM can provide a solution:

Our monitoring system travels through the furnace with the product, logging temperatures from up to 20 thermocouples connected to the product or distributed in the load to get an accurate thermal 'balance'. The system is easily placed on the line with the product causing less disruption and gives a more accurate picture of true product or load temperature. At the end of the profile run a powerful software package analyses the logged data to determine whether the specification has been met.

The profiling trials can be quickly carried out allowing you to resolve any furnace problems quickly, and to provide your customers with an assurance of a consistent process control.







TS08 thermal barriers

Built specifically for Aluminiuum brazing applications. The TS08 thermal barriers are designed to eliminate exposed insulation, protecting against acid attack and extending the life of the thermal barrier. Oxygen presence within the thermal barrier is reduced by maximising the amount of nitrogen in the insulation material during manufacture which minimises possible oxygen contamination in the furnace. For processes sensitive to oxygen contamination the TS08 can be fitted with an optional facility to allow a nitrogen purge of the thermal barrier prior to each run, significantly reducing oxygen contamination.




Robust and rigid logger tray for reliable long-term performance and easy data logger installation.

Туре	TS08-85	TS08-104	TS08-125	TS08-185 vac
500°C / h	0.7	1.1	1.5	4.0
600°C / h	0.6	0.8	1.3	3.0
700°C / h	0.5	0.6	1.0	2.3
Height / mm	85	104	125	185
Width / mm	272	272	272	294
Length / mm	516	516	516	447

Need a thermal barrier to suit your application? Tell us your requirements, and if it's possible, we'll design and manufacture it for you! We are constantly developing and looking forward to any new challenge.

High temperature materials and highest quality workmanship!



An application specific construction to maximise life and minimise process impact.







Thermocouples

For temperatures above 250°C mineral insulated thermocouples are generally the first choice. The thermocouples wires are insulated by magnesium oxide and protected by a high grade alloy sheath. For special applications we can supply thermocouples with other insulation materials. Thermocouples can be mechanically held, or retained in holes to record temperatures at critical points.

Type K or N mineral insulated thermocouples in 1.5 and 2.0mm diameter.





Standard TS08 range performance:

Thermal View Plus


The easy way to get a perfect result!

⁶ Button ⁷ Temperature ⁴⁵ ⁴⁵ ⁴⁵ ⁴⁵ ⁴⁶ ¹	Start Run		Enable	Name
C Date/Time 11/02/2011 15:23:54 3 ✓ Channel 2 C Date/Time 11/02/2011 15:23:54 3 ✓ Channel 4 Stop Run Image:		1	~	Channel 1
• Dealer mic • Start Now • Start Now • Start Now • Start Now • Start Now • Button • Date/Time • It/02/2011 • Disable Button once logging • Date/Time • Disable Button once logging • Date/Timation	C Temperature 45 °C	2	•	Channel 2
C Start Now 4 ✓ Channel 4 Stop Run 5 ✓ Channel 5 Image: Comparison of the stop Run 6 ✓ Channel 5 Image: Comparison of the stop Run 7 ✓ Channel 7 Image: Comparison of the stop Run 11/02/2011 115:23:54 9 ✓ Channel 7 Image: Comparison of the stop Run 11/02/2011 115:23:54 9 ✓ Channel 8 9 ✓ Channel 9 9 ✓ Channel 10 11 12 ✓ Channel 11 12 ✓ Channel 11 12 ✓ Channel 14 13 ✓ Channel 14 15 ✓ Channel 15 16 ✓ Channel 15 16 ✓ Channel 16 17 ✓ ✓ Channel 17 17 ✓ Channel	C Date/Time 11/02/2011 - 15:23:54 -	3	~	Channel 3
Stop Run 5 Ø Channel 5 Stop Run © Date/Time 11/02/2011 15:23:54 9 Ø Channel 6 Sample Rate MM SS t 0 Ø Channel 11 Image: Simple Rate MM SS t 0 Ø Channel 11 Image: Simple Rate MM SS t 0 Ø Channel 11 Image: Simple Rate		4	~	Channel 4
MM SS t Image: Sample Rate Image: SS	s Start NOW		~	Channel 5
MM SS t Image: Sample Rate MM SS t Image: Imag	Stop Run		~	Channel 6
MM SS t 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 0 ± 5 ± 12 Channel 12 13 U 13 U Channel 13 14 14 U Channel 15 U 15 U Channel 15 U 16 U Channel 15 17 17 U Channel 18 U Channel 18 18 U Channel 18 U U	😥 🤅 Button	7	~	Channel 7
Sample Rate 9 Ø Channel 9 Image: Some in the second s	C Data/Time 11/02/2011 - 15-73-54	8	~	Channel 8
MM SS t 0 1 5 1 0 1 5 1 0 1 5 1 11 12 12 13 14 12 14 14 14 15 16 15 16 15 16 17 16 17 18 11 18		9	~	Channel 9
$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$	Sample Rate			Channel 10
13 Channel 13 14 Channel 14 15 Channel 15 16 Channel 15 17 Channel 17 18 Channel 17 18 Channel 18 18 Channel 18	MM SS t	11		Channel 11
13 Channel 13 14 Channel 14 15 Channel 15 16 Channel 15 17 Channel 17 18 Channel 17 18 Channel 18 18 Channel 18				Channel 12
I Disable Button once logging I I Channel 15 Datalogger Information 15 I Channel 15 Image: Information 33:05:55 (HH:MM:SS) 16 I Channel 15 Image: Information 33:05:55 (HH:MM:SS) 17 IC Channel 16 Image: Information 16:10 IC Channel 17 IC Channel 18 Image: Information 10:10 18 IC Channel 18			~	Channel 13
Datalogger Information 15 Ø Channel 15 Run Duration: 33:05:55 (HH:MM:SS) 16 Ø Channel 16 Battery Level: 2.95 V 18 Ø Channel 18				Channel 14
Run Duration: 33:05:55 (HH:MM:SS) 16 Channel 16 Battery Level: 2.95 V 17 V Channel 18 Channel 19 18 V Channel 18			~	Channel 15
Battery Level: 2.95 V 18 Channel 17	Run Duration: 33:05:55 (HH:MM:SS) Battery Level: 2.95 V		~	Channel 16
10 Channel 10			~	Channel 17
Calibration Date: 18/11/2010			~	Channel 18
			~	Channel 19


Simply enter:

- How to start the data logger
- The rate at which data is to be collected
- The number of thermocouples to be used.

For regular measurements these can be set with one mouse click or pressing the data logger start button.

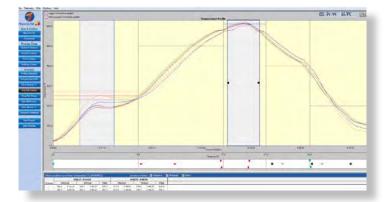


Comprehensive analysis tools are located on the left side of the screen for single click analysis and report generation. Data import and export in both .csv and PhoenixTM formats are available allowing electronic transfer of process data.

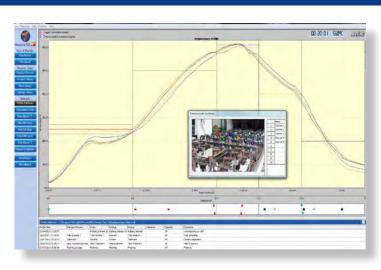

PhoenixT

The temperature profile is displayed in the graphics window of the Thermal View software. Thermocouple profiles can be switched on or off individually and you can zoom in for more detailed analysis.

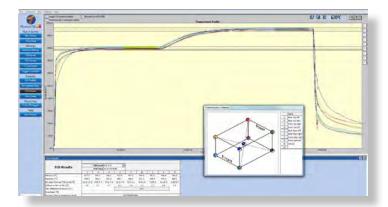

A seperate software package, "Thermal View Survey" is available for surveying furnaces to industry requirements. Featuring thermocouple and data logger correction factors, user defined TUS leves and tolerances, View Frame anaylsis, over shoot search, data import / export, printed report. Contact us for a demo version!

PhoenixTM GmbH

Dehmer Str. 48 D- 32549 Bad Oeynhausen Tel.: +49 5731 30028 0 Fax: +49 5731 30028 14



www.Phoenixtm.de info@phoenixtm.de

Langkamp Technology B.V.

Molenvliet 22 3961 MV Wijk bij Duurstede the Netherlands Tel.: +31 (0)343-59 54 10





